

FD30

User Manual

I. Charging

- A. Make sure device is turned off
- B. Plug into USB charger
- C. Charging is complete when red charging light turns off

II. Recording

- A. With device unplugged, turn device on
- B. Recording begins automatically
- C. To stop recording, turn device off

III. Playing Back Files

- A. Make sure device is turned off
- B. Plug into USB charger
- C. Open up your computer file viewer and open the removable drive
- D. Access files to listen, copy, or delete

Note:

- If the drive becomes full, or the battery is too low, the device will save current recording, and power down.
- When device is turned on, recording will begin automatically anytime the noise level is above 40db (roughly the sound of a library, or birds chirping)