

# FD15 INSTRUCTION MANUAL

## Power On/Off

To power on, slide the power switch to the ON position.

To power off, slide the power switch to the OFF position.

## Charging

-Make sure your FD15 is powered off.

-Plug it into the USB port of a computer or into an AC outlet via a wall charger(not included).

-Allow to charge for 2-3 hours before use.

-The LED indicator light will be red while charging.

-The LED indicator light will turn blue when charging is complete.

NOTE: The FD15 will not record while it is charging.

## Time/Date Stamp (Windows Only)

-Connect your FD15 to a computer via the USB slot.

-Open the removable drive.

-Double click the "SetTime" file.

-Double click the "SetTime.exe" file.

-You will see a dialog box with "Success on setting time YYYY-MM-DD HH:MM:SS!".

-Click the OK button and the FD15 will then sync with the current time of your PC.

-Your recordings will now have the correct time and date.

NOTE: If the FD15 shuts down due to low battery, the time and date will be reset. Please make sure to set the time and date again.

The logo for Recorder Gear, featuring the word "RECORDER" in white and "GEAR" in a grey, stylized font, all contained within a white rectangular border with rounded corners.

## Voice Activated Recording

Start recording:

- Power on your FD15. The LED indicator light will be red and blue.
- The indicator light will then flash red several times and then turn off indicating that the voice activated recording has started.

NOTE: There will be no LED indicator lights during recording.

NOTE: You can save a recording and start a new file by powering off your FD15, waiting 5 seconds and then powering it back on.

Stop Recording:

- Power off your FD15.
- You will see a red and blue light indicating that voice recording has ended and the recording has been saved.

NOTE: If the battery is low or memory full, files will be automatically saved before powering off.

## Playback Saved Files

- Power off your FD15.
- Plug it into the USB port of a computer.
- Open the removable drive and then open the RECORD folder.
- Here you can access or delete recorded files.

NOTE: For MAC users, after deleting files from the FD15, empty your trash bin to complete deletion.

NOTE: DO NOT DELETE ANY SYSTEM FILES.

## SPECIFICATIONS

Recording Time: 13-16 hours

Sampling Rate: 16KHZ

Memory Capacity: (8GB) 36 hours,  
(16GB) 72 hours

Bit Rate: 512KBPS

Charging Time: 2-3 hours

Battery: 110mAh Lithium RBS

Weight: 16g, 0.56oz

Size: 66.5x22x8.5mm

WAV Audio File Format

## HAPPY? NOT HAPPY?

We're only happy when you're happy. Our friendly and hassle-free customer service team will work hard to put a smile on your face.

(208) 557-9460 or [SUPPORT@RECORDERGEAR.COM](mailto:SUPPORT@RECORDERGEAR.COM)